



Installation Instructions

Part Number 28-20054

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

With proper care, this filter will last the life of your vehicle. This filter may be used in a stock machine, and no modifications will be required. However there are special installation instructions, so please follow the procedures outlined below to ensure that the AEM® air filter seals properly.

INSTALLATION

- 1) Remove the stock air filter.
- 2) Position the plastic cage onto the filter element as shown below.
- 3) Slide the AEM® Air Filter/cage assembly into the airbox. Make sure that it is properly seated on the sealing surface.
- 4) Close the access door of the airbox.
- 5) To remove the filter assembly, gently pull on the filter material until the assembly is free to slide out.

CAUTION - Use only gentle finger pressure to remove the filter. Do not use any tools or the filter material might be damaged.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

