



# INSTALLATION INSTRUCTIONS

## Part Number: MG-8506

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

\* FREE K&N® decal To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). FREE K&N® decal \*

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N Filtercharger® seals properly.

**If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.**

### INSTALLATION:

1. Disconnect the air temperature sensor connector. (Fig.1 & 2)
2. Slide off and remove the main fuse box from its holder (Fig.3)
3. Undo all six screws and remove the air filter housing cover. (Fig. 4)
4. Remove the air filter frame and take out dirty air filter. (Fig. 5 & 6)
5. Locate the arrows on the K&N® air filter and install with arrows pointing towards the front of the bike. (Fig. 7 & 8)
6. Install the air filter frame on the K&N® replacement air filter. **NOTE: The air filter frame must cover the note on the filter "IF LEGIBLE, ROTATE FILTER 180 Degrees"** (Fig. 9 & 10)
7. Reverse steps 1-3 to complete the installation.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**



Fig.1



Fig.2



Fig.3



Fig.4



Fig.5



Fig.6



Fig.7



Fig.8



Fig.9



Fig.10

### CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.