



AccuCharge Instructions

Read the following steps completely before beginning. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center.

Step 1: Remove the filter from your vehicle.

Step 2: Gently tap the filter against the inside of your trash can to remove the external dirt particles (it can make a mess, so we found it most convenient to tap it against something you won't have to clean up later!). Tap it so the dirty side is towards the surface you are tapping.

Step 3: Spray the filter with the Spectre Air Filter Cleaner and allow the solution to soak in for about 10 minutes.

Step 4: Rinse the filter with warm water, clean side to dirt side, to flush out the dirt. Do not use high pressure sprayers or hose nozzles as they can damage the filter.

Step 5: Allow the filter to dry. Placing it in a warm area or in sunlight will help to speed up the drying process. Do not use any direct heat source (heat gun, hair dryer, etc.) as it may damage the filter.

Step 6: Identify the filter you are servicing. All OEM replacement filters, and most cone filters, have part numbers molded into them. There are, however, a few filters that do not - Our cone-style filters with chrome lids can be identified by measuring the overall length – 3.7" = 8162 (P2), 6.7" = 8132 (P4), and 10.5" = 9732 (P5). Our P3 filters, with black lids, can be identified by measuring the overall length – 6.25" tall with 3" inlets = 9132. You can also find part numbers on our online catalog at SpeedbySpectre.com. If you need further assistance in determining which filter you have, please contact us.

Step 7: Determine the required oil amount from the chart on the next page of these instructions.

Step 8: Apply the required amount of oil to the filter by spraying it on the media evenly. There will be a small amount of overspray so be sure to take appropriate action to protect the surrounding area. DO NOT APPLY MORE OIL THAN RECOMMENDED IN THE CHART! We have carefully calculated the oil requirements of each of our filters. Over-oiling can cause a decrease in air flow and performance.

Step 9: Wipe any overspray off of the filter lid, base, and name plate and re-install the filter.

Part No.	Oil Amount	Part No.	Oil Amount	Part No.	Oil Amount
8129	35	HPR0100	15	HPR8922	35
8131	35	HPR0136	35	HPR8925	50
8132	35	HPR0136B	35	HPR8956	35
8136	35	HPR0136K	35	HPR8969	25
8138	35	HPR0136W	35	HPR8997	35
8161	20	HPR0138	50	HPR9053	40
8162	20	HPR0138B	50	HPR9054	45
8166	20	HPR0138K	50	HPR9055	30
8168	20	HPR0138W	50	HPR9115	15
9131	20	HPR0139	65	HPR9269	140
9132	20	HPR0139B	65	HPR9332	30
9136	20	HPR0139K	65	HPR9345	50
9138	20	HPR0139W	65	HPR9360	55
9731	50	HPR0160	30	HPR9361	25
9732	50	HPR0184	20	HPR9392	30
9736	50	HPR0192	35	HPR9401	90
9738	50	HPR0326	45	HPR9482	25
48021	35	HPR0327	35	HPR9492	40
48022	35	HPR0351	35	HPR9493	35
48026	35	HPR0352	20	HPR9564	30
48029	35	HPR0881	70	HPR9589	150
880100	15	HPR0881B	70	HPR9605	60
880136	35	HPR0881K	70	HPR9605B	60
880138	50	HPR0881W	70	HPR9605K	60
880139	65	HPR0882	65	HPR9605W	60
880160	30	HPR0882B	65	HPR9606	30
880192	35	HPR0882K	65	HPR9606B	30
880326	45	HPR0882W	65	HPR9606K	30
880351	35	HPR0883	65	HPR9606W	30
882606	15	HPR0883B	65	HPR9609	25
883300	25	HPR0883K	65	HPR9609B	25
883559	25	HPR0883W	65	HPR9609K	25
883588	30	HPR0891	60	HPR9609W	25
883647	15	HPR0891B	60	HPR9610	30
883901	40	HPR0891K	60	HPR9610B	30
883914	55	HPR0891W	60	HPR9610K	30
883915	25	HPR0892	50	HPR9610W	30
883916	30	HPR0892B	50	HPR9611	45
884309	40	HPR0892K	50	HPR9611B	45
884808	20	HPR0892W	50	HPR9611K	45
884810	20	HPR2606	15	HPR9611W	45
884813	30	HPR2606B	15	HPR9612	35
884939	20	HPR2606K	15	HPR9612B	35
885056	25	HPR2606W	15	HPR9612K	35
885058	30	HPR2740	25	HPR9612W	35
885350	35	HPR3300	25	HPR9615	15
886366	25	HPR3492	65	HPR9615B	15
886479	60	HPR3549	95	HPR9615K	15

Part No.	Oil Amount	Part No.	Oil Amount	Part No.	Oil Amount
886555	70	HPR3559	25	HPR9615W	15
886690	40	HPR3588	30	HPR9616	15
886807	25	HPR3647	15	HPR9616B	15
886850	40	HPR3660	30	HPR9616K	15
887344	30	HPR3901	40	HPR9616W	15
887351	45	HPR3902	50	HPR9617	20
887417	65	HPR3914	55	HPR9617B	20
887420	10	HPR3915	25	HPR9617K	20
887421	35	HPR3916	30	HPR9617W	20
887432	35	HPR4309	40	HPR9618	15
887440	45	HPR4778	20	HPR9618B	15
887597	40	HPR4808	20	HPR9618K	15
887598	25	HPR4808B	20	HPR9618W	15
887626	45	HPR4808K	20	HPR9683	35
887640	110	HPR4808W	20	HPR9687	30
887730	35	HPR4810	20	HPR9762	30
887774	30	HPR4810B	20	HPR9778	50
888038	65	HPR4810K	20	HPR9831	30
888039	45	HPR4810W	20	HPR9832	10
888040	25	HPR4813	30	HPR9833	10
888080	35	HPR4813B	30	HPR9838	35
888133	40	HPR4813K	30	HPR9881	55
888205	30	HPR4813W	30	HPR9881B	55
888208	60	HPR4939	20	HPR9881K	55
888221	40	HPR5056	35	HPR9881W	55
888241	55	HPR5058	30	HPR9882	45
888243	40	HPR5350	35	HPR9882B	45
888602	45	HPR5466	35	HPR9882K	45
888606	35	HPR6366	25	HPR9882W	45
888699	25	HPR6479	60	HPR9883	45
888747	35	HPR6555	70	HPR9883B	45
888755	55	HPR6626	30	HPR9883K	45
888756	40	HPR6690	40	HPR9883W	45
888805	40	HPR6807	25	HPR9884	45
888817	55	HPR6850	40	HPR9884B	45
888911	20	HPR7017	25	HPR9884K	45
888918	45	HPR7094	25	HPR9884W	45
888925	75	HPR7142	30	HPR9886	25
888997	35	HPR7167	15	HPR9886B	25
889054	45	HPR7344	30	HPR9886K	25
889332	30	HPR7351	45	HPR9886W	25
889345	50	HPR7365	35	HPR9888	25
889360	55	HPR7417	65	HPR9888B	25
889392	30	HPR7420	10	HPR9888K	25
889401	90	HPR7421	35	HPR9888W	25
889482	25	HPR7432	35	HPR9889	30
889564	30	HPR7440	45	HPR9889B	30
889589	150	HPR7597	40	HPR9889K	30

Part No.	Oil Amount	Part No.	Oil Amount	Part No.	Oil Amount
889605	60	HPR7598	25	HPR9889W	30
889606	30	HPR7626	45	HPR9891	40
889607	20	HPR7640	110	HPR9891B	40
889608	25	HPR7651	35	HPR9891K	40
889609	25	HPR7730	35	HPR9891W	40
889610	30	HPR7737	35	HPR9892	35
889611	45	HPR7738	40	HPR9892B	35
889612	35	HPR7764	25	HPR9892K	35
889613	55	HPR7774	30	HPR9892W	35
889614	45	HPR8037	65	HPR9893	45
889615	15	HPR8038	45	HPR9893B	45
889616	15	HPR8039	45	HPR9893K	45
889617	20	HPR8040	25	HPR9893W	45
889618	15	HPR8069	25	HPR9895	60
889687	35	HPR8080	35	HPR9935	30
889762	30	HPR8133	40	HPR9935B	30
889778	50	HPR8142	30	HPR9935K	30
889831	30	HPR8205	30	HPR9935W	30
889832	10	HPR8208	60	HPR9969	25
889833	10	HPR8221	40	HPR10014	40
889838	35	HPR8241	55	HPR10022	40
889881	55	HPR8243	40	HPR10165	35
889882	45	HPR8475	35	HPR10169	30
889883	45	HPR8547	30	HPR10171	35
889884	45	HPR8548	40	HPR10262	60
889886	25	HPR8602	45	HPR10464	35
889888	25	HPR8606	35	HPR10690	65
889889	30	HPR8699	25	HPR10755	35
889891	40	HPR8747	35	HPR10781	40
889892	35	HPR8755	85	HPR11257	65
889895	30	HPR8756	40		
889935	30	HPR8805	40		
889969	25	HPR8817	55		
8810014	40	HPR8911	20		
8810165	35	HPR8918	40		