



HEAVY DUTY AIR FILTER CLEANING INSTRUCTIONS

DRYFLOW

NO OIL REQUIRED


STEP 1: REMOVE FILTER

Remove the air filter from the air filter housing. Handling with care, remove loose dirt and debris from the filter by tapping it with your hand and/or spraying it with compressed air. If compressed air is used, blow air from the clean side of the filter to the dirty side

STEP 2: APPLY CLEANER

Spray a generous amount of K&N Heavy Duty Air Filter Cleaner #99-0638 onto both sides of the filter, with the majority of it applied to the dirty side. Allow to soak in for 20 minutes. Do not allow it to dry on the air filter.

**STANDARD
FLOW**

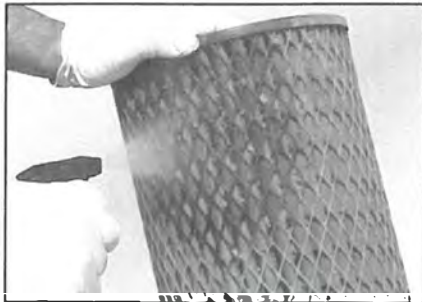


**REVERSE
FLOW**




STEP 3: RINSE FILTER

Using a pressure washer or garden hose, begin by rinsing any large dirt particles off of the dirty side of the filter. Then rinse the filter element with cool or warm (not hot) water from the clean side out in order to flush the rest of the dirt out of the filter. Continue rinsing until the water flowing through the media is completely clear of any dirt or debris. Depending on the volume of dirt in the filter, a second or third application of cleaner and rinsing may be required.

**STANDARD
FLOW**

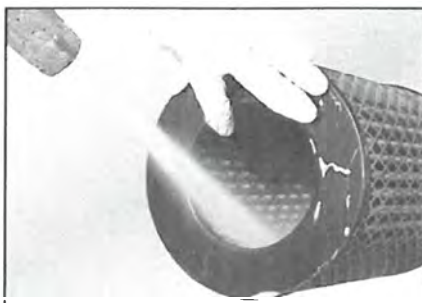

**REVERSE
FLOW**

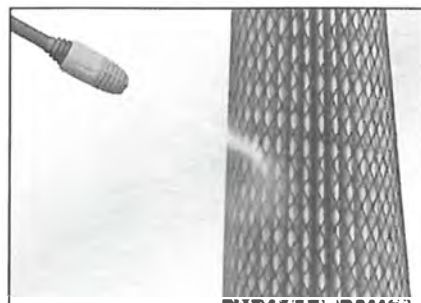

STEP 4: DRY AND RE-INSTALL

After rinsing, gently shake off excess water. Allow filter to dry naturally, or use compressed air from 12" away to speed the drying cycle. The filter should be dry, or just slightly damp before re-installing. Re-install the air filter element back into the air filter housing of the vehicle, following original installation instructions.

The above process is the only approved procedure for maintaining your K&N Heavy Duty Air Filter.

Visit knfilters.com for additional information on cleaning your filter.