

This filter fits: See current AEM® catalog for current applications

With proper care, this filter will last the life of your vehicle. This filter may be used in a stock machine, and no modifications will be required. However there are special installation instructions, so please follow the procedures outlined below to ensure that the AEM® air filter seals properly.

## **INSTALLATION:**

- 1. Un-fasten the airbox clamps.
- 2. Remove the airbox lid from the vehicle.
- 3. Remove the stock air filter. (Fig. 1)
- 4. Wipe out any dirt or dust that may be inside the air filter housing.
- 5. Install the AEM® air filter into the airbox base. Make sure the contour of the air filter clears the ribs inside the airbox. (Fig. 2).

NOTE: For 03-09 5.9L diesel applications, since there are no ribs in the airbox the filter will fit either way.


- 6. Press around the edges of the air filter to ensure that it is properly sealed.
- 7. Re-install the airbox lid and re-fasten the airbox clamps.

NOTE: FAILURE TO FOLLOW INSTALLATION INSTRUCTIONS AND USE THE PROVIDED HARD-WARE MAY IMPAIR THE PERFORMANCE OF YOUR FILTER AND DAMAGE YOUR ENGINE.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1

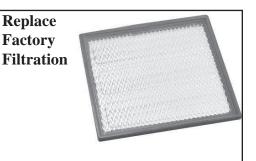



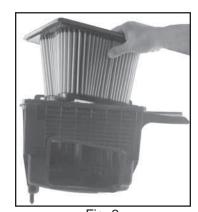


Fig. 2

