



# INSTALLATION INSTRUCTIONS

## Part Number PL-1608

This filter fits: See catalog for current applications

\* FREE K&N® decal To register your warranty, please see us online at [knfilters.com/register](http://knfilters.com/register). FREE K&N® decal \*

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modification required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N air filter seals properly.

### INSTALLATION:

1. Remove stock air filter per owners manual.
2. Using the provided K&N sealing grease, place a bead of grease around the parameter of the filter.  
**Note: This is to help with the installation of sliding the K&N air filter in the air box and later removal. Fig 1**
3. With the sealing side of the K&N air filter facing the rear of the air box, proceed to push the air filter into the air box.  
**Note: Apply pressure to the air filter on the outside edges so damage of the pleats does not occur. Fig 2**
4. To ensure that the filter is in all of the way make sure that the seal is flush with the air box. **Fig 3**
5. Reinstall the air box cover and tighten screw. **Fig 4**

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**



Fig. 1



Fig. 2



Fig. 3



Fig. 4