



INSTALLATION INSTRUCTIONS

Part Number: SU-9921

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

* FREE K&N® decal To register your warranty, please see us online at knfilters.com/register. FREE K&N® decal *

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter can be used in a stock machine, with no modifications required. If any engine modifications have been made tuning/jetting adjustments may be required. There are special installation instructions, so please follow the procedures outlined below to ensure the K&N® Filtercharger® seals properly.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

INSTALLATION:

- 1.) Remove the 10 screws and remove the air filter housing lid. **(Fig. 1)**
- 2.) Remove the (2) screws that secures the OE filter. **(Fig. 2)**
- 3.) Remove the (2) screws from the stock air filter by pushing it out from the back side. **(Fig. 3)**
- 4.) Install the (2) screws that was removed in the above step into the K&N air filter as shown, using the supplied retainers. **(Fig. 4)**
- 5.) Install the K&N air filter into the air box and tighten the filter retaining screws. **(Fig. 5)**
- 6.) Re-install the air box lid to complete installation.

NOTE: With the cabin filter installed, clean an area on the glove box and apply the K&N Stop Decal. The decal will help notify others that this is a reusable air filter.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 2



Fig. 3



Fig. 4



Fig. 5

CLEANING:

K&N Engineering, Inc., suggests checking the air filter element periodically for excessive dirt build-up. Depending on your driving conditions, we recommend cleaning your air filter every 50,000 miles. To clean and re-oil, purchase our filter Recharger® service kit, part number 99-5050 or 99-5000 and follow the easy instructions.