



INSTALLATION INSTRUCTIONS

Part Number 33-2350

This filter fits: **SEE CATALOG FOR CURRENT APPLICATIONS**

FREE K&N DECAL** To register your warranty, please see us online at knfilters.com/register. **FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However, the following procedures **MUST** be followed to ensure the proper fit and seal of the K&N Air Filter.

INSTALLATION

1. Unfasten air box clamps.
2. Remove the factory air box lid.
3. Remove the existing air filter.
4. Clean the factory air box of all dust and debris using a clean, soft rag.
5. Install the K&N Air Filter into the factory air box.
6. Gently press the sealing edge of the K&N Air Filter into the factory air box to ensure that it is properly sealed.
7. Place air box lid back onto the factory air box.
8. Fasten sequence of clamps. begin at clamp #1, finish with clamp #5 to ensure proper fit. (Fig 1)

Note: Installing a K&N Air Filter will exert greater resistance on factory air box clamps. Following sequence (Fig. 1) will ensure proper fit.

**THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED;
OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.**

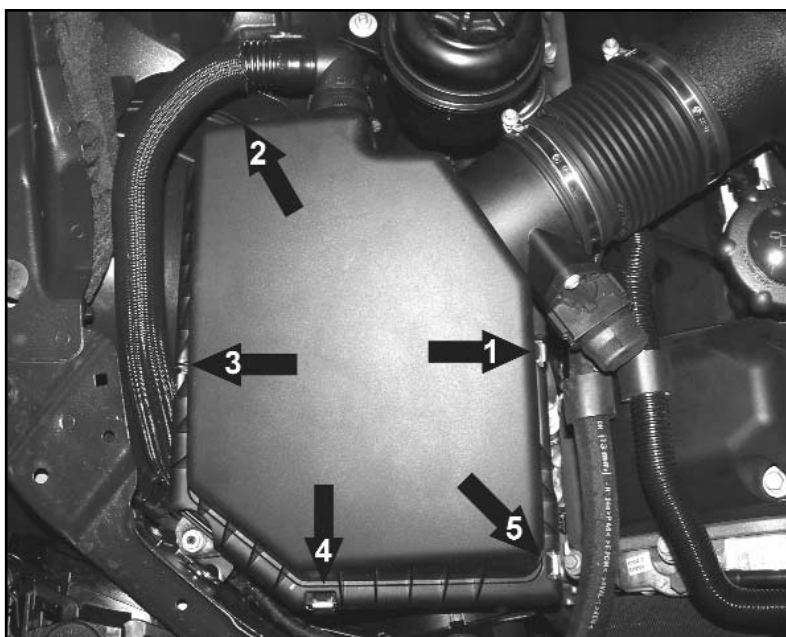


Fig. 1