

Airaid

INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

Installation Instructions

For Part Numbers:

200-751 850-135 Airaid Oiled Media Filter

201-751 851-135 SynthaMax Dry Media Filter - Red

2017-18 / CHEVROLET / Silverado 1500

2018-20 / CHEVROLET / Tahoe


2019-20 / CHEVROLET / Suburban

2017-20 / GMC / Yukon, Yukon XL

2017-18 / GMC / Sierra 1500

2017-20 / CADILLAC / Escalade, Escalade ESV

V8-6.2L

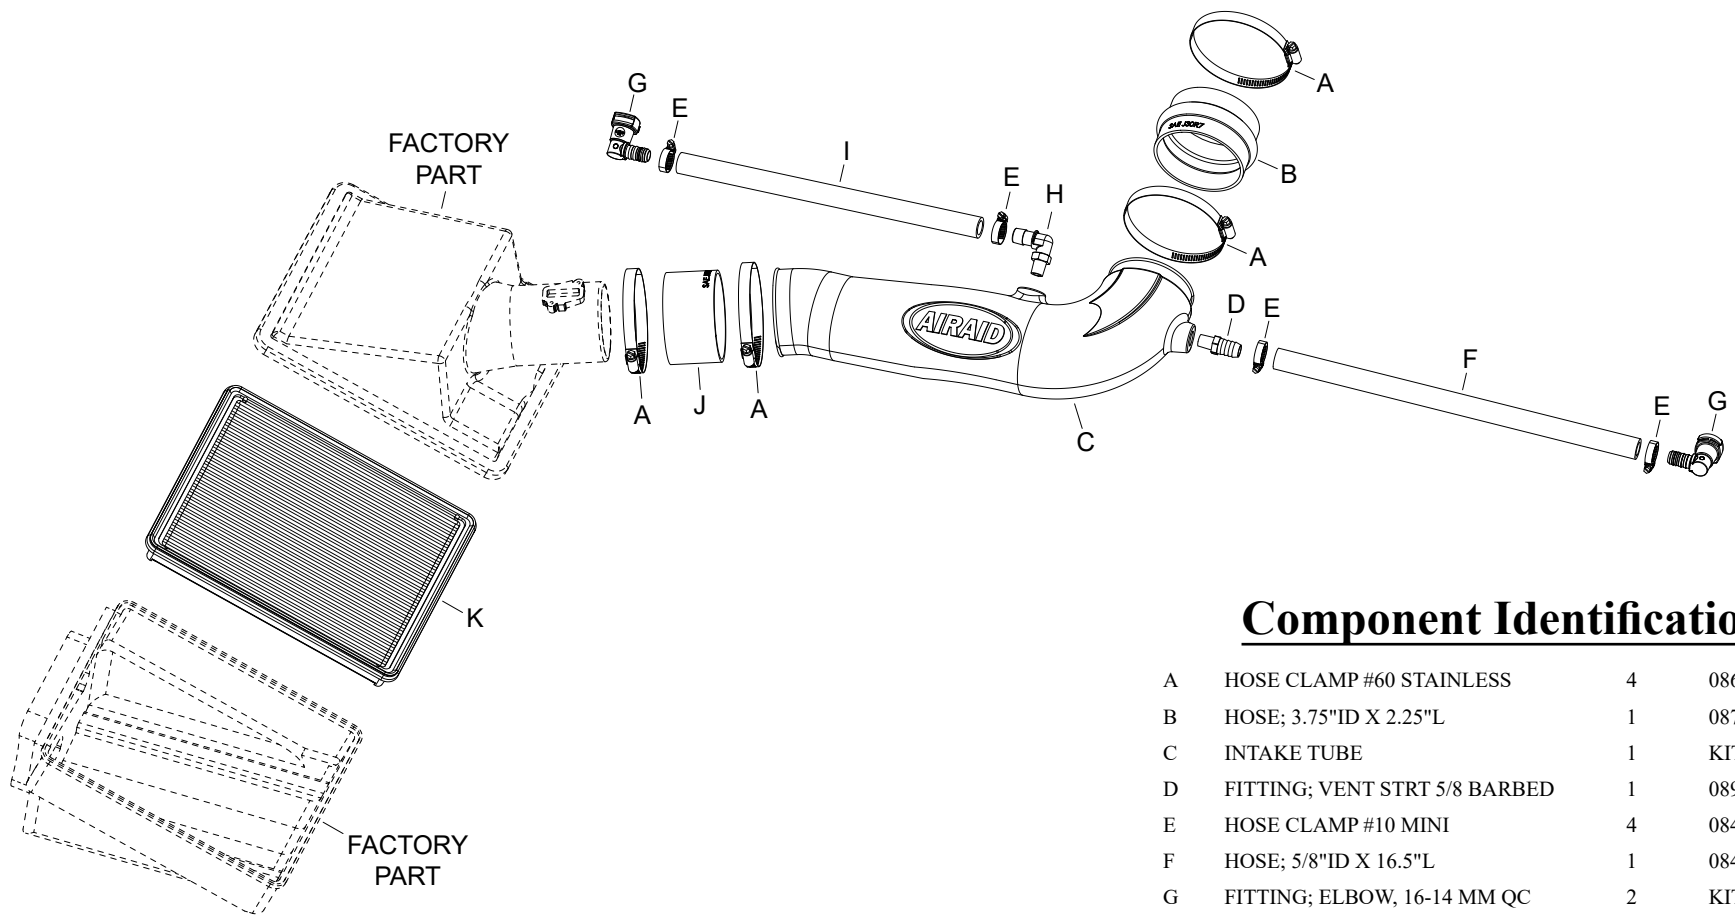

Component Identification

| | | | |
|---|-------------------------------|---|---------------|
| A | HOSE CLAMP #60 STAINLESS | 4 | 08628 |
| B | HOSE; 3.75"ID X 2.25"L | 1 | 08760 |
| C | INTAKE TUBE | 1 | KIT751A |
| D | FITTING; VENT STRT 5/8 BARBED | 1 | 08911-1 |
| E | HOSE CLAMP #10 MINI | 4 | 08411 |
| F | HOSE; 5/8"ID X 16.5"L | 1 | 08482 |
| G | FITTING; ELBOW, 16-14 MM QC | 2 | KITFITTING33 |
| H | FITTING; VENT 1/4NPT, 90DEG. | 1 | 08525 |
| I | HOSE; 5/8"ID X 14"L | 1 | 084083 |
| J | HOSE; 3-13/16"ID TO 3.75"ID X | 1 | 08683 |
| K | FILTER | 1 | 850 / 851-135 |

Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

TO START:

1. Turn off the ignition and disconnect the negative battery cable.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Disconnect both crank case quick connect vent lines from the valve covers.



3. Loosen the hose clamps that secure the intake plenum to the throttle body and air filter housing. Then remove the intake plenum from the vehicle.

NOTE: Airaid recommends that customers do not discard factory air intake.



4. Loosen the screws that secure the upper air filter housing and then lift off the housing to remove the factory air filter.



5. Install the AIRAID® air filter into the lower filter housing and then reinstall the upper housing and secure with the factory hardware.



6. Install the provided 90° and straight vent fittings into the AIRAID® intake tube as shown.

NOTE: Plastic NPT fittings are easy to cross thread. Install the vent fitting "hand" tight, then turn it two complete turns with a wrench.

Continued...



7. Install the provided coupler hoses onto the AIRAID® intake tube and secure with the provided hose clamps.



8. Install the intake tube assembly onto the air filter housing and then onto the throttle body, adjust the tube for best fit and then secure with the provided hose clamps.



9. Cut the provided crank case vent hose into lengths of 12" and 15".



10. Install the provided quick disconnect fittings into one end of each hose and secure with the provided hose clamps.



11. Install the crank case vent hose assemblies onto the vent fittings installed into the AIRAID® intake tube and then connect the quick connect fittings to the port on the valve covers.

NOTE: the 12" long assembly is for the passenger side and the 15" assembly is for the driver's side valve cover.



12. Double check your work!

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight. Double check the hood clearance!

Reconnect the negative battery cable!

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water.

WATER INGESTION IS THE DRIVERS RESPONSIBILITY! The air filter is reusable and should be cleaned periodically.

FILTER IDENTIFICATION

850-135 Airaid Oiled Media

851-135 Airaid SynthaMax Dry Media - Red

For your Oiled media filter we offer the Airaid Tune Up Kit!



P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray



INTAKE SYSTEMS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECIFIC VEHICLE.

SynthaMax

Do Not Oil

Synthamax Air Filters do not require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.