

# SPECTRE®

## Performance

### Intake Installation Instructions P/N 9049 (red filter) - P/N 9049B (blue filter) P/N 9049K (black filter)

#### Year/Make/Model/Engine

2015-16 Chrysler 200 3.6L

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle



#### Parts List

- 1- Intake tube
- 1- Heatshield
- 1- Air Filter
- 1- 3" coupler
- 2- Edge trims
- 3- 3" Hose clamps
- 3- M6 bolts
- 3- Plastic Air box Mounts
- 3- Washers

#### Tools Required:

- 5/16" or 8mm nut driver
- 8mm socket
- 10mm socket
- Ratchet

For filter reorders ask at the special order counter of your local parts store or call:

1-909-673-9800

ask for: P/N HPR9132 (red filter)  
P/N HPR9136 (blue filter)  
P/N HPR9131 (black filter)



### Step 1

**Safety first! Before you begin the installation, make sure that the vehicle is in park (or neutral for a manual transmission) with the parking brake set. Disconnect the negative battery terminal and verify that all components that are listed are present. Note: This kit was designed and tested on a stock engine without any custom tuning done to the engine computer. Removing the battery cable may erase the programmed radio stations. The anti-theft code will need to be entered into some radios after the battery cable is connected. The anti-theft code can typically be found in the owner's manual or at your local dealership.**

---




### Step 2

**Lift the engine cover up to release the clips holding it in place and remove the engine cover from the vehicle.**



### Step 3

**Disconnect the quick disconnect hose at the air box. Loosen the hose clamps that hold the air intake in place. Then release the plastic clip that holds the coolant hose onto the intake tube.**

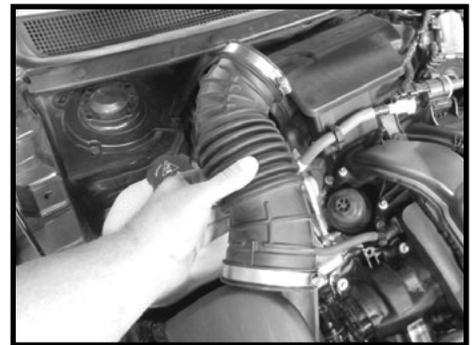

### Step 4


**Remove the intake hose from the vehicle.**

---



### Step 5

**Lift up to release the mounting studs holding the air box and lift the air box out of the vehicle.**

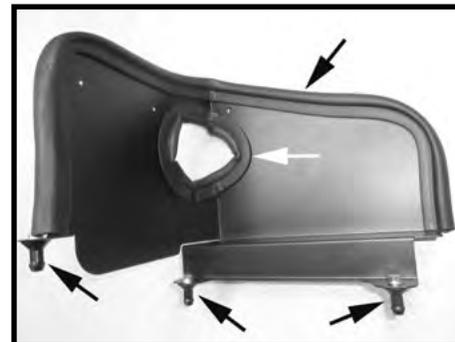

### Step 6

**Cut the rubber edge seal into a 15" length piece and a 29" length piece. Install the 29" piece on the edge of the heat shield as shown. Then install the 15" piece into the hole in the heat shield. Some trimming may be necessary. Then install the 3 plastic mounts onto the heat shield.**



**Step 7**  
Install the provided coupler on to the vehicle as shown.



**Step 8**  
Install the intake tube into the hole in the heat shield. Install the intake assembly into the vehicle as shown while making sure the plastic mounts capture into the locating grommets.



**Step 9**  
Install the filter onto the Intake tube and tighten the hose clamp. Reinstall the engine cover.



**Step 8**  
Make sure that all clamps and hardware are fully tightened. Reconnect the battery cable, start the vehicle and let it warm up. Shut off and inspect the installation once more for any loose clamps, wires, or hardware. Test drive & enjoy! Your installation is now complete. Periodically check all clamps and brackets.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

 **WARNING** This product can expose you to a chemical or chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

**NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.**  
See Spectreperformance.com for CARB status on each part for a specific vehicle

**SPECTRE**  
*Performance*

(909) 673-9800

[www.spectreperformance.com](http://www.spectreperformance.com)

© 2017 SPECTRE PERFORMANCE Made in China

176245  
9/28/17