

Airaid

INSTALLATION INSTRUCTIONS

204-795 854-083 Airaid Oiled Media Filter

205-795 855-083 SynthaMax Dry Media Filter

2019-20 CHEVROLET Silverado 1500

2019-20 GMC Sierra 1500

V6-4.3L

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.


See Airaid.com for CARB status on each part for a specific vehicle

TOOLS NEEDED:

Flat blade screw driver

COMPONENT IDENTIFICATION

Description	Qty.	Part #
A FITTING; VENT, 1/2" BARB	1	82629
B HOSE CLAMP; #10 MINI	2	08411
C HOSE; 5/8"ID X 15"L	1	5-7015
D FITTING; ELBOW, 16-14 MM	1	KITFITTING33
E VENT; STRT QUICK DISC.	1	08526
F GROMMET; 1/2"ID - 1"OD (104)	1	KITGRMT03
G HOSE CLAMP #48	1	08601
H REDUCER; 3.5"ID X 3"ID X 2.5"L	1	KITRDCR05
I HOSE CLAMP; #56	1	08620
J TUBE; (NN)	1	087456
K HOSE CLAMP; #64	2	08645
L HUMP HOSE; 4"ID X 3"L	1	KITHUMPHS22
M AIR FILTER	1	854/855-083

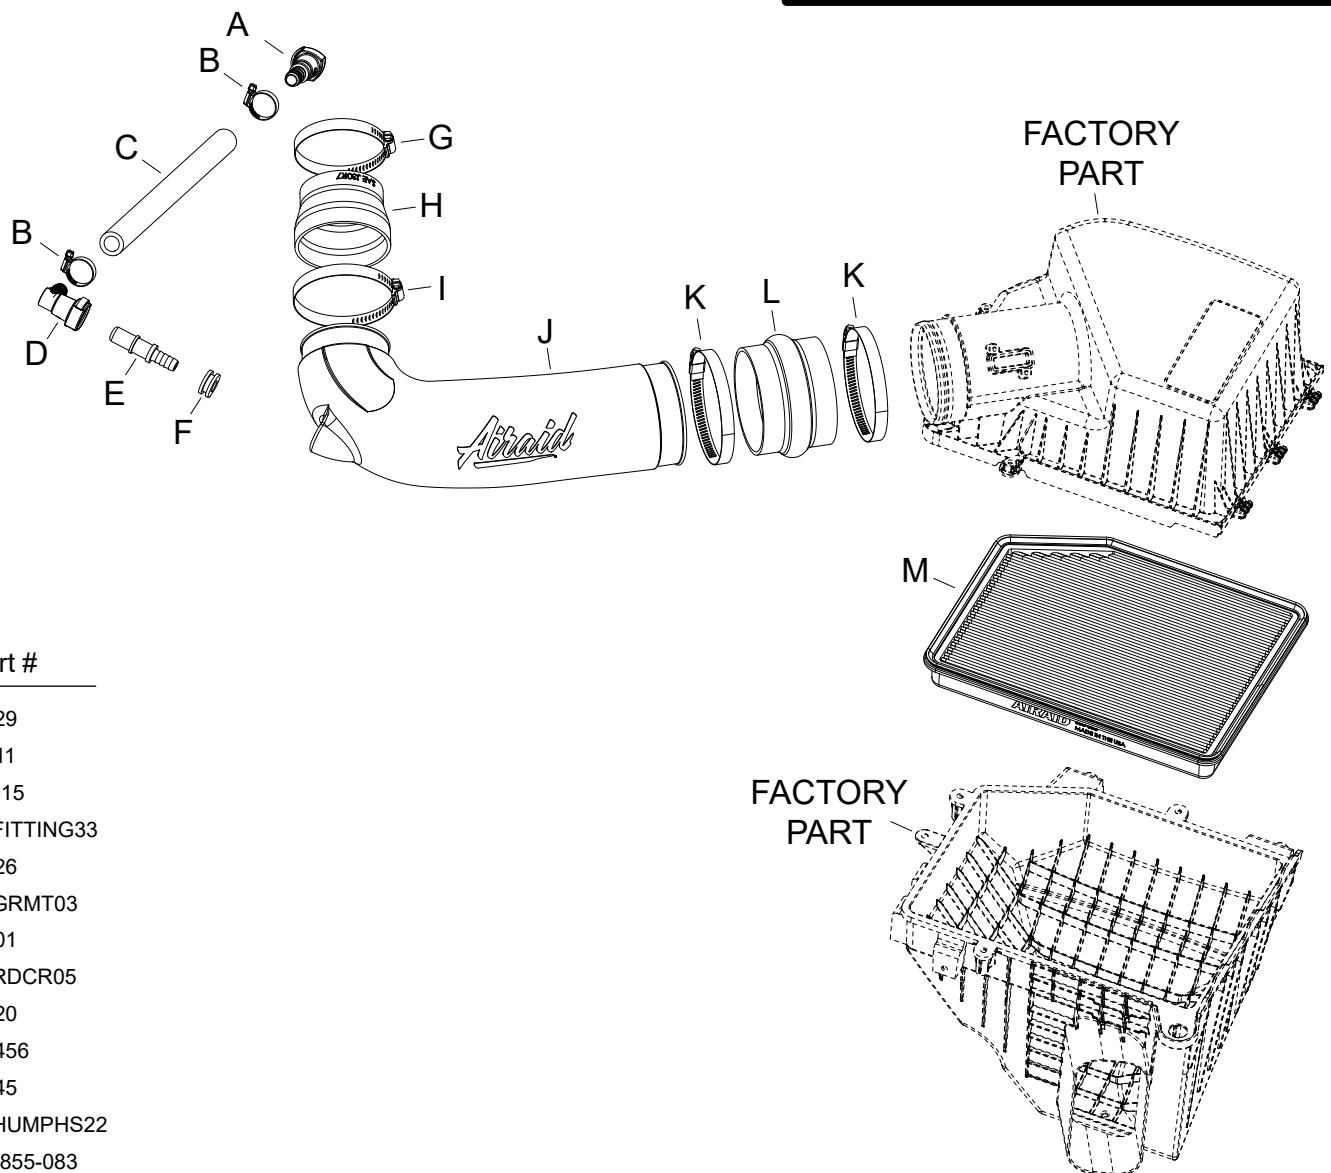

Full color instructions can be viewed on our web site at Airaid.com. If you need any assistance please call 1-800-498-6951 to speak with a representative in our Customer Service Center before returning the product.


TO START:

1. Turn off the ignition and disconnect the negative battery cable.

NOTE: Disconnecting the negative battery cable erases pre-programmed electronic memories. Write down all memory settings before disconnecting the negative battery cable. Some radios will require an anti-theft code to be entered after the battery is reconnected. The anti-theft code is typically supplied with your owner's manual. In the event your vehicles anti-theft code cannot be recovered, contact an authorized dealership to obtain your vehicles anti-theft code.



2. Depress the locking tabs and disconnect the crank case vent line from the intake plenum and valve cover.

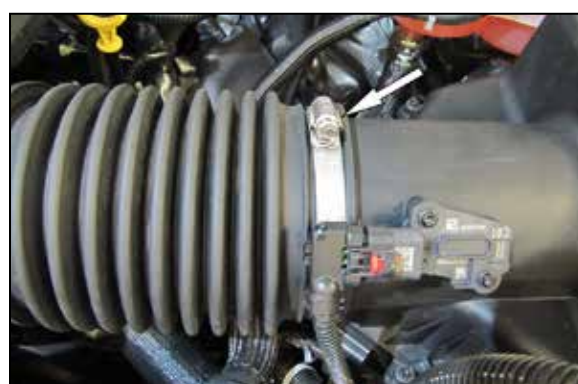

3. Loosen the hose clamp that secures the intake tube to the air filter housing.



4. Loosen the hose clamp that secures the intake plenum to the throttle body. Rotate the plenum counter clockwise to unlatch it from the mounting bracket and then remove the plenum from the vehicle.

NOTE: AIRAID recommends that customers do not discard factory air intake.



5. Remove the upper air filter housing and replace the factory air filter with the provided AIRAID® air filter and then reinstall the upper housing and secure with the factory hardware.



6. Install the provided hump coupler (KITHUMPHS22) onto the air filter and secure with the provided hose clamp.

Continued...



7. Install the provided straight coupler (KITRDCR05) onto the throttle body and secure with the provided hose clamp.



8. Install the provided grommet and vent fitting into the AIRAID® intake tube as shown.



9. Install the AIRAID® intake tube into the coupler at the air filter housing and then into coupler on the throttle body, adjust the tube for best fit and then secure with the provided hose clamps.



10. Assemble the crank case vent hose assembly as shown.



11. Connect the crankcase vent hose assembly to the fitting in the AIRAID® intake tube and to the valve cover port.



12. Double check your work!

Make sure there is no foreign material in the intake path. Make sure all clamps, hoses, bolts, and screws are tight. Double check the hood clearance! **Reconnect the negative battery cable!**

13. **AIRAID AIR FILTER MONITOR LIGHT:** Some vehicles are equipped with a "Air Filter Monitor" system that will send a message to the instrument cluster indicating that the air filter needs to be replaced. This system is calibrated for the OEM intake system and air filter and will not be accurate when AIRAID products are in use. Always refer to WWW.AIRAID.COM for AIRAID air filter service procedures. The "Air Filter Monitor" system must be disabled to prevent the monitor from setting on and causing a factory dealership visit reset the system. Follow the "Air Filter Monitor" system procedure listed in the factory owners manual.

14. **NOTE:** Most General Motors vehicles have the Vehicle Emissions Certification Information (VECI) label affixed to the air filter box. In order to be compliant with California emissions laws, the label **MUST** remain in the engine compartment. If the Vehicle Emission Control Information label is removed during modification, a new replacement label must be obtained and installed in a readily visible position in the engine compartment. The label shall not be affixed to any equipment which is easily detached from the vehicle. We recommend that the label is affixed to the underside of the hood adjacent to the hood latch. The label is Vehicle Identification Number dependent and can be ordered from the vehicle dealership. In order to receive the proper decal please bring your VIN with you. Failure to have the VECI under the hood may result in failure of a pre-registration smog test.

Thank you for purchasing the Airaid Intake System. Contact Airaid @ (800) 498-6951 8:00 AM - 5:00 PM MST weekdays for questions regarding fit or instructions that are not clear to you. Your Airaid Intake System was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If any parts are missing, contact Airaid. The air filter element is protected from direct exposure to water and debris; care should be taken not to drive through deep water. **WATER INGESTION IS THE DRIVERS RESPONSIBILITY!** The air filter is reusable and should be cleaned periodically.

For your Oiled media filter we offer the Airaid Tune Up Kit!



P/N 790-551 Aerosol Spray
P/N 790-550 Squeeze Spray



NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Airaid.com for CARB status on each part for a specific vehicle

SynthaMax

Synthamax Air Filters **do not** require oil. Service air filter as needed by cleaning with common non-petroleum all-purpose household cleaner and water. Simple Green®, Formula 409® or equivalent works great. Apply cleaner to outside of air filter and allow to soak. Then flush filter clean from the inside out with a garden hose and repeat steps if necessary. Do not apply high pressure water or air to clean filter. Allow filter to air dry and reinstall.