




Installation Instructions
Part Number 250-501
Airaid Spacer For
2016-19 Chevrolet Camaro SS
2014-19 Chevrolet Corvette C7
Stringray
V8-6.2L

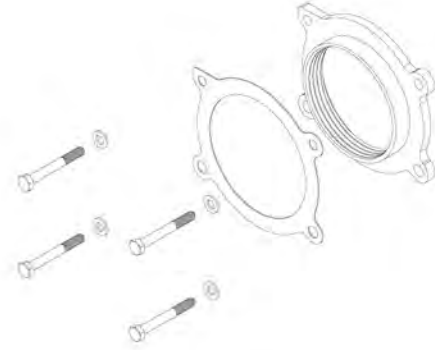

Parts List

AIR-KIT501PA Aluminum Plate	(1)
AIR-KIT501G Gasket	(1)
M6 x 1.0 — 50mm Bolt	(4)
M6 Flat Washer	(4)

Tools Required For Installation

- 5/16" (8mm) Nut Driver (or Flat Blade Screwdriver)
- 10mm Socket and Socket Wrench

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See AIRAID.COM for CARB status on each part for a specific vehicle.

Thank you for purchasing the Airaid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your Airaid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.



1. Disconnect the negative battery cable!



2. Disconnect the two hoses from the intake tube. Loosen the two hose clamps and remove the air intake tube.



3. Disconnect the wiring harness from the throttle body by pushing the tab on the bottom and sliding out.



4. Using a 10mm socket, loosen the throttle body bolts and remove the throttle body.



5. With the throttle body facing down, place the gasket and the Airaid throttle body spacer on top of it as shown. **Note: the position of the rectangular shaped tab.**



6. Install the assembly using the supplied bolts and washers. Tighten the bolts to the factory recommended torque. **DO NOT OVERTIGHTEN!** Reconnect the wiring harness to the throttle body.



7. Reinstall the intake tube and fully tighten the hose clamps. Reconnect the two hoses to the intake tube. **Re-connect the negative battery cable!**

Contact your nearest Airaid dealer for an Airaid Intake System for your car, truck or SUV.

AIR-I25501A
Rev. 03.18.2021

Airaid. 1455 Citrus St., P.O. Box 1329, Riverside, CA. 92502 1-800-498-6951 AiraidInfo@airaid.com