


400-529 INSTALLATION INSTRUCTIONS 94-95 Ford Mustang 5.0L

Thank you for purchasing the Airaid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your Airaid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping. If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

Thank you for selecting AIRAID.

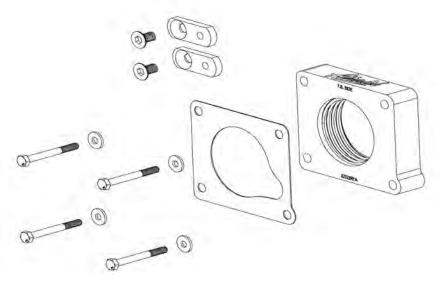

THROTTLE BODY SPACERS FOR VEHICLES LISTED ARE 50 STATE LEGAL. SEE AIRAID.COM FOR CARB STATUS ON EACH PART FOR A SPECFIC VEHICLE.

<u>Parts List</u>		
AIR-KIT529PA	Aluminum Plate	(1)
AIR-KIT529G	Gasket	(2)
AIR-KIT529H	Hardware	
5/16-18 x 2 1/2 Bolts		(4)
5/16 Washers		(4)
Linkage Plates		(2)
8mm x 16n	nm Flat Head Screws	(2)

Tools List

13mm Socket 5mm Hex Key Wrench Standard Screwdriver

Installation Instructions. Read Me!

- 1. DISCONNECT NEGATIVE (-) BATTERY CABLE.
- 2. Remove air cleaner assembly.
- 3. Remove (2) 8mm bolts from throttle linkage bracket and save. (Ref. D)
- **4.** Remove (4) bolts from the throttle body. (**Ref.** C)
- 5. Install the power plate using both gaskets. (Ref. A)
 - A. Place one gasket between the throttle body and spacer.
 - **B.** Place second gasket between the spacer and intake manifold.
- 6. Install (4) 5/16-18" x 2 1/4" bolts and (4) 5/16" washers. (Ref. C)
- 7. Install (2) throttle linkage plates using (2) 8mm x 16 flat head screws. (Ref. D)
- **8.** Install throttle linkage bracket using (2) saved 8mm bolts.
- 9. <u>Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.</u>
- 10. Reinstall air cleaner assembly using Step 2 as an example.
- 11. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

Ref. "D"- (2) Linkage Plates

- (2) 8mm x 16 Flat Head Screws
- (2) 8mm "Existing Bolts" (Linkage Bracket)



Ref. "A"- (1) Spacer (2) Gaskets

Ref. "C"- (4) 5/16-18" x 2 1/2" Bolts (4) 5/16" Washers

Ref. "B"- Throttle Body

AIR-I40529C Rev. 09.29.20