

INSTALLATION INSTRUCTIONS Part Number E-2653 & E-2657

This filter fits: SEE CURRENT CATALOG FOR APPLICATIONS

FREE K&N DECAL To register your warranty, please see us online at knfilters.com/register. FREE K&N DECAL

Congratulations, you have purchased the finest air filter that money can buy. With proper care, this filter will last 1 million miles or more. This filter is a direct replacement for the stock air filter, and no modifications will be required. However the following procedures MUST be followed to ensure the proper fit and seal of the K&N Filtercharger®.

If you need any assistance please call 1-800-858-3333 to speak with a representative in our Customer Service Center before returning the product.

- 1. Remove the screws that fasten the airbox lid to the airbox base.
- 2. Remove the airbox lid from the vehicle.
- 3. Remove the dirty air filter.
- 4. Wipe out any dirt or dust that may be inside the air filter housing.
- 5. Install the K&N® filter into the airbox base by first applying gentle pressure to the base side first. (See fig. 1)
- 6. Orient filter so that post on end of filter drops into notch in air box when filter is seated. (See fig. 2.)
- 7. Use index finger to press clamp against flange and slide filter and clamp against air box base until fully seated. (See fig. 3)
- 8. Orient clamp as shown to insure that air box lid closes properly. Tighten clamp. (See fig. 4)
- 9. Re-install the airbox lid and re-fasten the screws.

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED. OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.



Fig. 1



Fig. 3

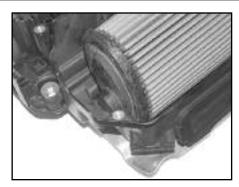


Fig. 2

