

SPECTRE®

Performance

Intake Installation Instructions P/N 9026 (red filter) - P/N 9026B (blue filter) P/N 9026K (black filter)

Year/Make/Model/Engine
2014 GM Silverado/Sierra 1500 4.3L

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION
CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR
STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle



Parts List

- 1 - Intake tube
- 1 - Air filter
- 1 - Heat shield- Large
- 1 - Heat shield- Small
- 1 - 4" Offset velocity stack adaptor
- 1 - 4" x 3 1/2" Reducer coupler
- 1 - 3 1/2" 90° Rubber elbow
- 2 - 5/8" Hose clamps
- 3 - 3 1/2" Hose clamps
- 1 - 4" Hose clamp
- 1 - 6" Hose clamp
- 3 - Allen bolts
- 3 - Flat washers
- 3 - Locknuts
- 1 - Allen wrench
- 1 - Rubber seal
- 1 - 5/8" Breather hose
- 2 - M4 Machine screws
- 1 - Adapter ring

Tools Required:

- 5/16" or 8mm Nut driver
- 6mm Nut driver
- Ratchet
- 10mm socket
- T15 torx
- Phillips screwdriver


For filter reorders ask at the
special order counter of your
local parts store or call:

1-909-673-9800

ask for: P/N HPR9891 (red filter)


P/N HPR9891B (blue filter)

P/N HPR9891K (black filter)

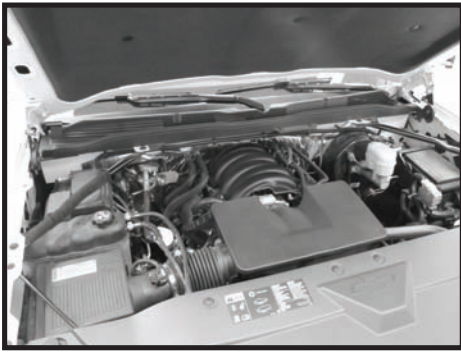


Step 1

Safety first! Before you begin the installation, make sure that the vehicle is in park (or neutral for a manual transmission) with the parking brake set. Disconnect the negative battery terminal and verify that all components that are listed are present. **Note:** This kit was designed and tested on a stock engine without any custom tuning done to the engine computer. Removing the battery cable may erase the programmed radio stations. The anti-theft code will need to be entered into some radios after the battery cable is connected. The anti-theft code can typically be found in the owner's manual or at your local dealership.

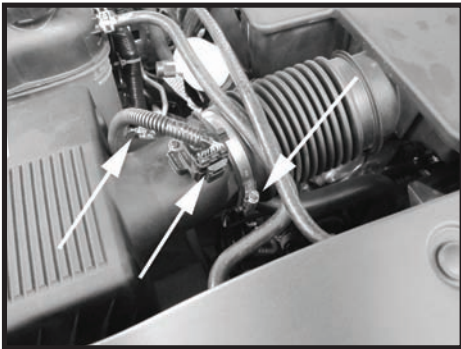


Step 2

Loosen the clamp at the air box. Disconnect the Mass Air Flow Sensor (MAFS) electrical connector and unclip the wiring harness from the air box.

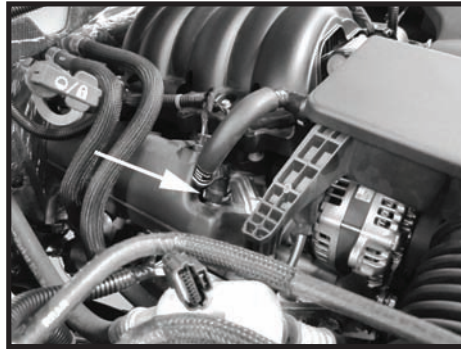


Step 3

Disconnect the breather tube from the engine. There is a small tab on the end of the tube, push it to release the breather tube.

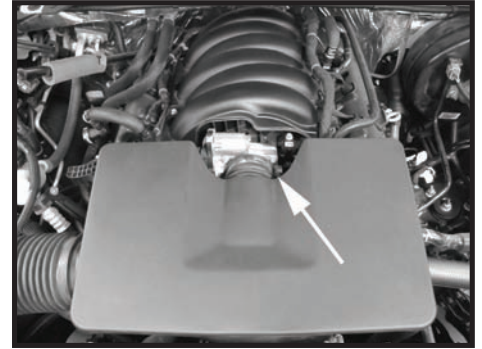


Step 4

Loosen the clamp at the throttle body and remove the factory plenum from the vehicle.

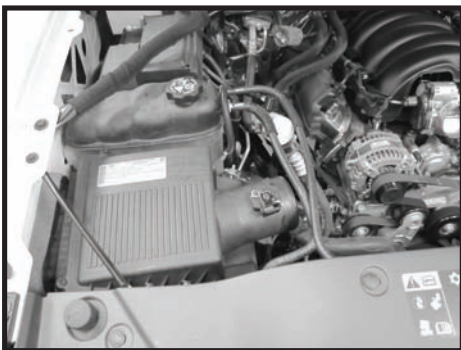


Step 5

Remove the air box assembly by pulling up and out firmly.

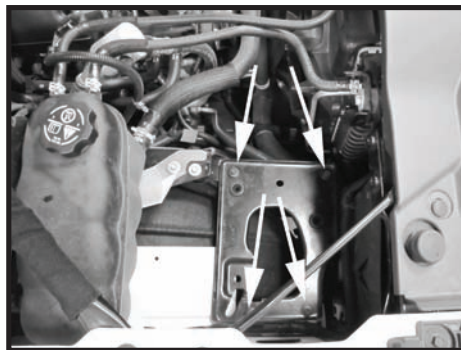


Step 6

Remove the air box mounting plate. Three of these bolts will be re installed with the new heat shield.

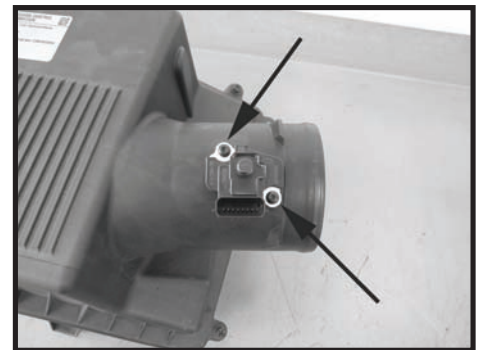

Step 7

Remove the MAFS from the factory air box.

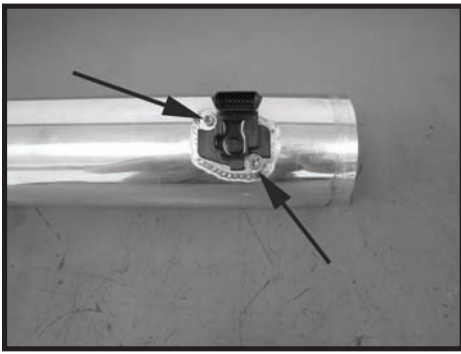


Step 8
Insert and fasten the MAFS onto the Spectre Performance intake tube with the provided machine screws.




Step 9
Assemble the heat shield with the tabs placed on the outside of heat shield. Install the rubber bulb seal. Place the velocity stack adapter in the heat shield and install the supplied flex coupler making sure the coupler is pushed completely against the heat shield. Take note of the orientation of the funnel, this may be rotated slightly once the filter is installed in the vehicle. Once the adapter and coupler are tight against the heat shield, tighten the clamp.




Step 10
Install the heat shield into the truck as shown by reusing the hardware from the tray. If the holes do not line up with the heat shield, see the next step to resolve this.

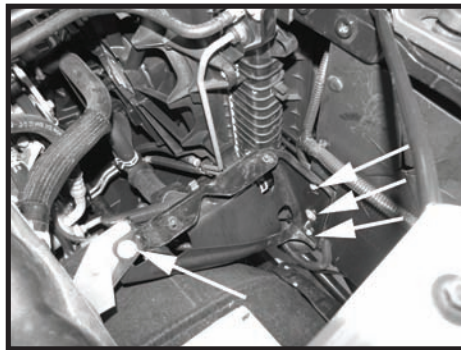


Step 11
This step is only required if your heat shield bolt pattern did not line up in Step 10. Loosen the 4 bolts shown, but do not remove them. Install the heat shield and fasten it securely in place. Once the heat shield is in place, securely fasten the 4 bolts that were just loosened.

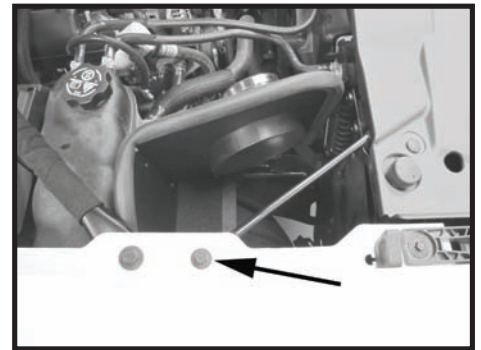

Step 12
Remove the bolt shown and rotate the brace towards the engine.

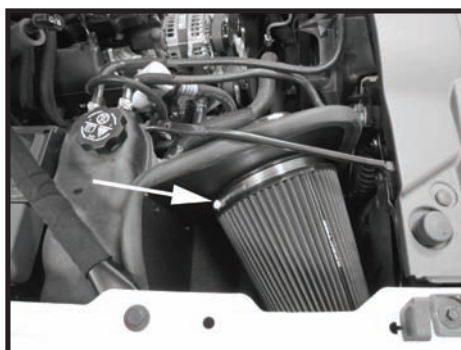


Step 13
Install the filter and fully tighten the clamp.

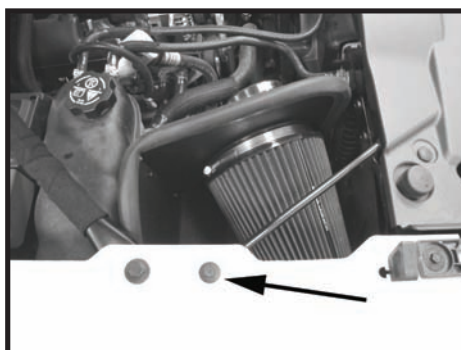


Step 14
Reinstall the bolt that was removed in Step 12.




Step 15
Install the throttle body adapter ring onto the throttle body.

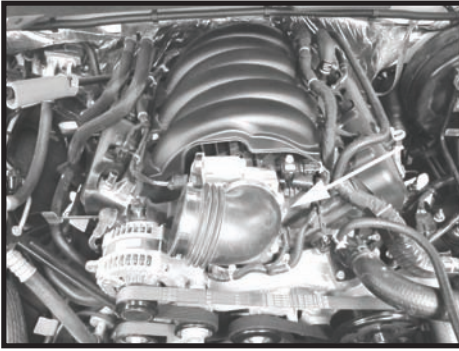


Step 16
Install the 90° boot on throttle body with the short side on the throttle body and clamp on the throttle body side to secure the boot in place. Install a second clamp but do not tighten at this time.

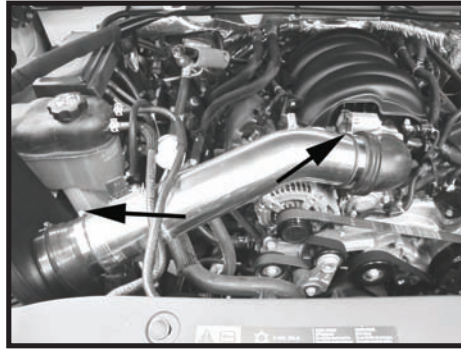

Step 17
Install the intake tube as shown and once in position tighten clamps.

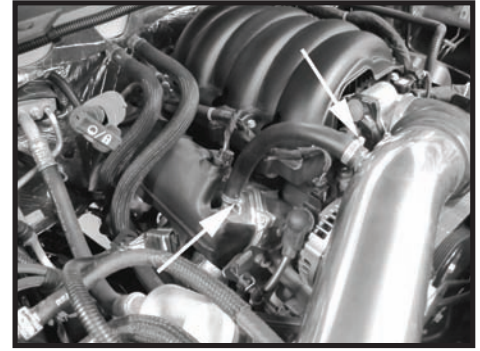

Step 18
Connect the supplied hose to the breather tube on the motor. Install the new hose onto the vacuum fitting on the intake tube.

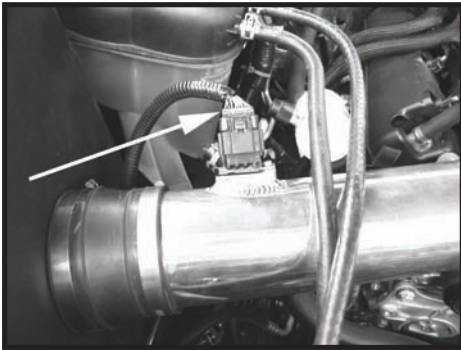

Step 19
Reconnect the MAFS wiring harness.



Step 20
Make sure that all clamps and hardware are fully tightened. Reconnect the battery cable, start the vehicle and let it warm up. Shut off and inspect the installation once more for any loose clamps, wires, or hardware. Test drive & enjoy! Your installation is now complete. Periodically check all clamps and brackets.

If you have any difficulties or questions regarding the installation of this intake system, contact the Spectre Performance Technical Department by email - Tech@spectreperformance.com or by phone 1-909-673-9800 Monday thru Friday 6:00am to 2:00pm PST.

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See Spectreperformance.com for CARB status on each part for a specific vehicle

SPECTRE
Performance

(909) 673-9800

www.spectreperformance.com

© 2015 SPECTRE PERFORMANCE Made in China

176218
8/26/15